

## Wireless Temp and Humidity Sensor User Manual



## Chapter 1 Product Introduction

### 1.1 Product Overview

This industrial-grade Ethernet temperature and humidity sensor features an oversized LCD display. It collects real-time temperature and humidity data and communicates via Ethernet. Compared to traditional wired temperature and humidity systems, this networked transmitter integrates sensing and communication into a single device. It eliminates the need for gateways or communication hosts, functioning as a standalone IoT node.

### 1.2 Features and Functions

This product employs a high-sensitivity digital probe, ensuring stable signals and high accuracy. It features a wide measurement range, excellent linearity, user-friendly operation, easy installation, and long transmission distances.

The product utilizes a large LCD display with dual upper/lower limit control for temperature and humidity. Users can freely set thresholds to enable high/low temperature alarms and high/low humidity alarms, with real-time display.

This product finds extensive applications in server room monitoring systems, power monitoring systems, security engineering, healthcare monitoring, energy consumption monitoring systems, and smart home solutions.

### 1.3 Key Parameters

Model	SN-3006-WS-WIFI
Power Supply	10~30V DC
Communication Interface	Standard WIFI wireless (2.4GHz/5GHz)
IP Address	Supports static IP address, IP address auto-acquisition function, cross-gateway, domain name resolution, and WAN connectivity
WIFI Communication Parameters	Support 802.11b/g/n wireless standard
WIFI Encryption Performance	Supports WPA/WPA2 security mode
A Quasi Accuracy	Humidity: $\pm 2\%RH$ (60%RH, 25°C)
Temperature: $\pm 0.4^{\circ}C$ (25°C)	
B Quasi Accuracy	Humidity: $\pm 3\%RH$ (60%RH, 25°C)
Temperature: $\pm 0.5^{\circ}C$ (25°C)	
Transmitter Circuit Operating Temperature	-20°C~+60°C, 0%RH~80%RH
Probe Working Temperature	-40°C~+120°C, default-40°C~+80°C
Probe Working Humidity	0%RH-100%RH
Temperature Display Resolution	0.1°C
Humidity Display Resolution	0.1%RH
Temperature and Humidity Refresh Time	1s
Long-term Stability	Humidity: $\leq 1\%RH/y$
	Temperature: $\leq 0.1^{\circ}C/y$

Response Time <sup>1</sup>	Humidity: ≤25s (1m/s wind speed <sup>2</sup> )
	Temperature: ≤8s (1m/s wind speed <sup>2</sup> )
Data Upload Time	Default 20s/time, 1s~10000s can be set
Internal Storage	Recording period 1min-1h can be set, recording capacity: 65000 groups

1. Response time is  $\tau \leq 63$ .

2. Wind speed refers to the wind speed at the sensor's internal sensitive material. When the test environment wind speed is 10 - 2 m/s, with the wind direction perpendicular to the sensor's intake port, the wind speed at the sensor's internal sensitive material is approximately 1 m/s.

**Size:**



**Product Appearance Diagram:**



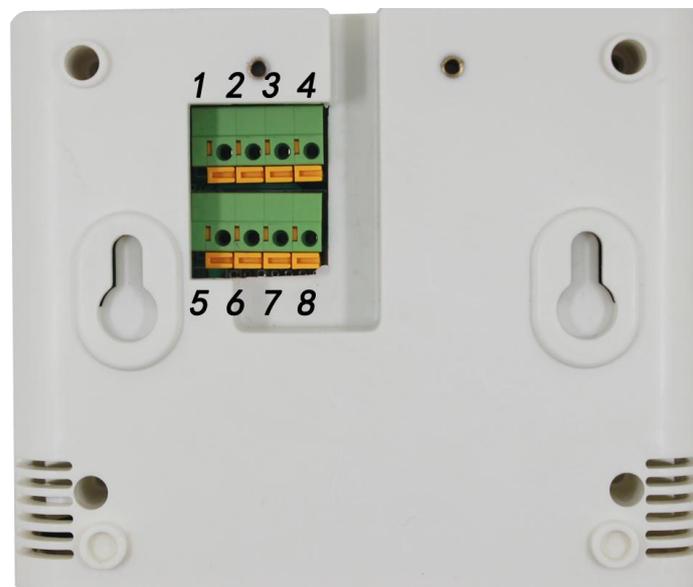
## Chapter 2 Hardware Connection

### 2.1 Pre-Installation Equipment Inspection

Equipment List:

- 1 unit of temperature and humidity transmitter
- 1 pair of wall mounting clips, 2 expansion plugs, 2 self-tapping screws, 2 countersunk screws
- 1 network cable (1 meter)
- Audible and visual alarm (optional)

### 2.2 Interface Description



No.	Description	No.	Description
1	Power Positive (7–30V DC)	5	Reserved
2	Power Negative	6	
3	Relay 1 Normally Open (NO)	7	Relay 2 Normally Open (NO)
4		8	

#### Special Notes:

- 1) Power can be supplied either through the power socket or the screwless terminals.
- 2) Both relays feature normally open contact outputs, allowing flexible association with alarm events. Refer to the manual's button configuration section for details.

### 2.3 Installation Instructions

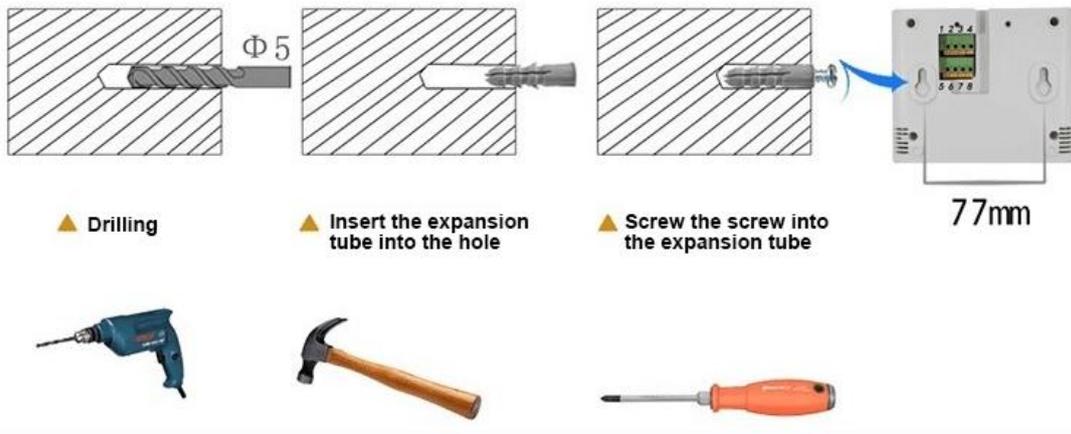
To facilitate on-site installation, we provide two mounting options:

#### 1) Hoist Hole Mounting

Instructions: Secure self-tapping screws and expansion bolts into predetermined wall positions. Mount the device using the wall-hanging method by attaching it to the

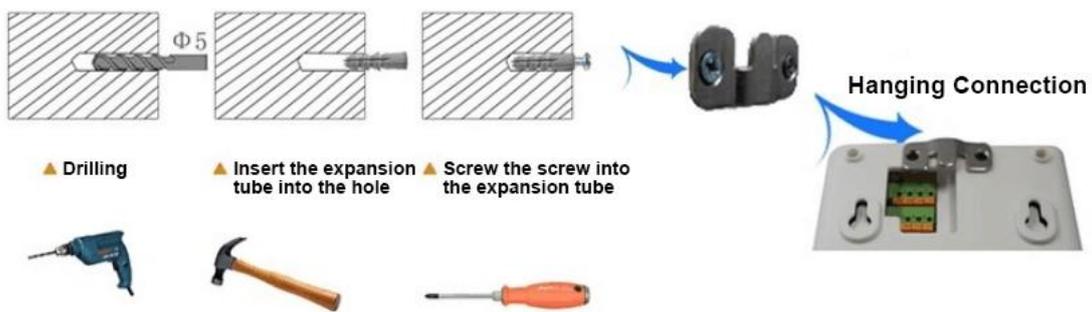
# SUCH

hoist holes.

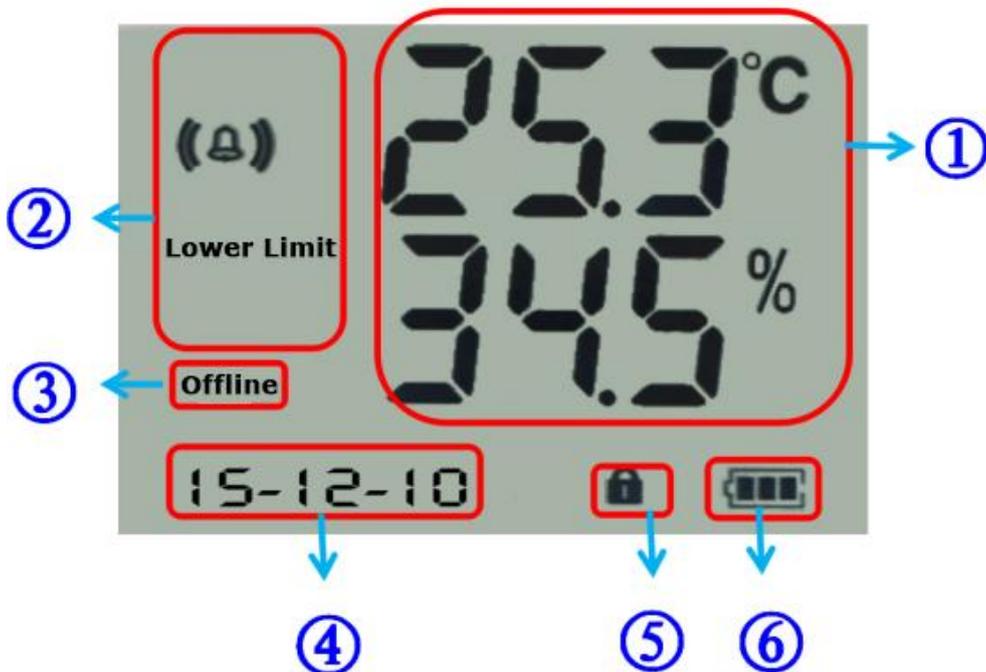


## 2) Wall-Mounted Hook Installation

Instructions: Secure one side of the hook to the wall using countersunk screws, and attach the other side to the equipment using screws. Then simply hook the two parts together.



## 2.4 Panel Description



Number	Description
①	Real-time temperature and humidity display
②	Temperature or humidity alarm alerts
③	Network disconnection notification
④	Rotating display of stored data count and system time
⑤	Indicator for parameter modification mode status
⑥	Remaining battery level display; external power models show full charge status

## Chapter 3 System Menu and Settings

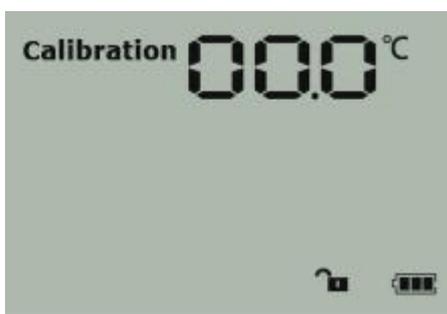
### 3.1 Key Function Descriptions

Button	Function	Description	Button Operation Mode
	Clear key	<ul style="list-style-type: none"> <li>Exit operation during parameter setup</li> </ul>	Short press
	Return key	<ul style="list-style-type: none"> <li>Return to main menu when configuring or viewing interfaces</li> </ul>	Short press
	Increase key	<ul style="list-style-type: none"> <li>Previous page button when viewing menus</li> </ul>	Short press
	Previous page	<ul style="list-style-type: none"> <li>Data increment button during parameter modification</li> </ul>	Short press
	Open	<ul style="list-style-type: none"> <li>Shortcut key to open alarms on main interface</li> </ul>	Long press
	Next page	<ul style="list-style-type: none"> <li>Page-up key during menu viewing</li> </ul>	Short press
	Decrease key	<ul style="list-style-type: none"> <li>Data decrease key during parameter modification</li> </ul>	Short press
	Close	<ul style="list-style-type: none"> <li>Shortcut key to close alarms on the main interface</li> </ul>	Long press
	Menu key	<ul style="list-style-type: none"> <li>Menu selection key to enter settings interface</li> </ul>	Short press
	Shift key	<ul style="list-style-type: none"> <li>Shift key during parameter modification</li> </ul>	Short press
	Confirm key	<ul style="list-style-type: none"> <li>Confirmation key after completing parameter modification</li> </ul>	Long press

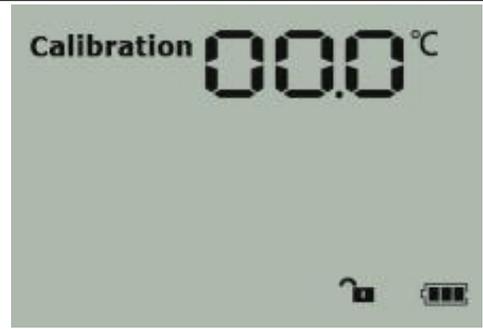
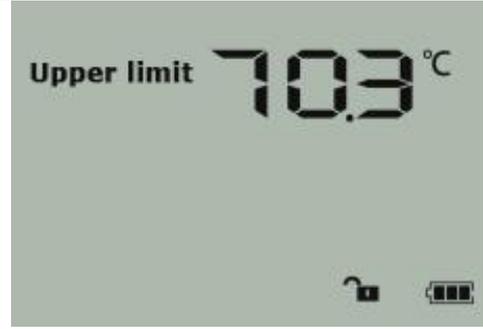
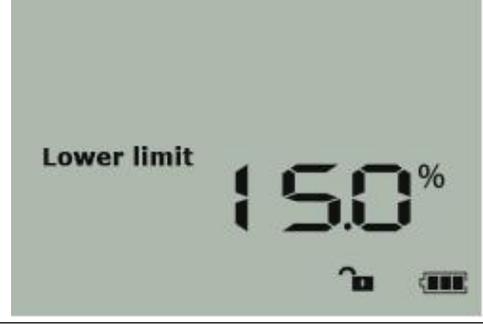
## 3.2 Key Operation Overview

- 1) Press  briefly to enter the password input screen. Press briefly , , or  to enter the password (default password: 888). After inputting, press and hold the " " key again. After 3 seconds, the main settings menu will appear. An incorrect password will return you to the main menu.
- 2) In the main settings menu, press briefly  or  to navigate pages forward/backward. Press briefly to enter parameter settings.
- 3) Press briefly on , , or  to modify parameters. After editing, press and hold  until the parameter flashes for 3 seconds to auto-save.
- 4) During setup, press  to cancel the current setting. Press again  to return to the main menu.

## 3.3 Functional Display Item Description

Display Items	Function	Scope and Description	Default
	Password	0~999	888
	Temperature Calibration Value	-100~+100	0

# SUCH

	Humidity Calibration Value	-100~+100	0
	Upper Temperature Limit Alarm Value	-100~+199	100
	Upper Humidity Limit Alarm Value	0~100	100
	Lower Temperature Limit Alarm Value	-100~+199	0
	Lower Limit Alarm Value for Humidity	0~100	0

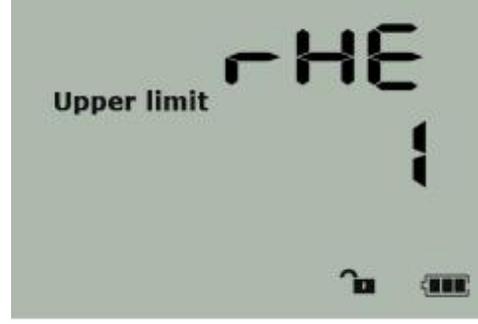
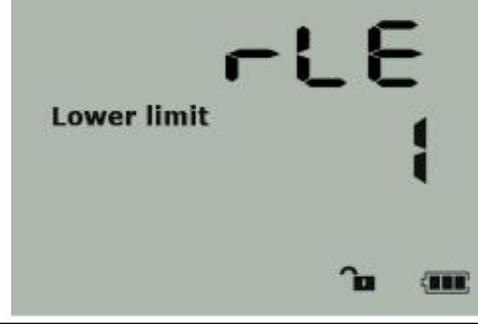
# SUCH

	<p>Temperature Alarm Hysteresis Value</p>	<p>0~120</p>	<p>0</p>
	<p>Humidity Alarm Hysteresis Value</p>	<p>0~100</p>	<p>0</p>
	<p>Time</p>	<p>Hours, Minutes, Seconds</p>	
	<p>Time</p>	<p>Year, Month, Day</p>	
	<p>Upper Temperature Limit Relay Number</p>	<p>1~2            1: Indicates this alarm item is associated with the first relay            2: Indicates this alarm item is associated with the second relay            When the temperature exceeds the upper limit, the relay associated with the upper limit closes.</p>	<p>1</p>

# SUCH

<p>The LCD display shows the text 'Lower limit' on the left. In the center, 'ELA' is displayed in large characters, with '1' below it. At the bottom right, there is a battery level indicator and a small icon of a padlock.</p>	<p>Lower Temperature Limit Associated Relay Number</p>	<p>1~2 1: Indicates this alarm item is associated with the first relay 2: Indicates this alarm item is associated with the second relay When the temperature falls below the lower limit, the relay associated with the lower limit closes.</p>	<p>1</p>
<p>The LCD display shows the text 'Upper limit' on the left. In the center, 'HA' is displayed in large characters, with '2' below it. At the bottom right, there is a battery level indicator and a small icon of a padlock.</p>	<p>Upper Humidity Limit Associated Relay Number</p>	<p>1~2 1: Indicates this alarm item is associated with the first relay 2: Indicates this alarm item is associated with the second relay When humidity exceeds the upper limit, the relay associated with the upper limit closes.</p>	<p>1</p>
<p>The LCD display shows the text 'Lower limit' on the left. In the center, 'LA' is displayed in large characters, with '2' below it. At the bottom right, there is a battery level indicator and a small icon of a padlock.</p>	<p>Lower Humidity Limit Associated Relay Number</p>	<p>1~2 1: Indicates this alarm item is associated with the first relay 2: Indicates this alarm item is associated with the second relay When humidity falls below the lower limit, the relay associated with the lower limit closes.</p>	<p>1</p>
<p>The LCD display shows the text 'Upper limit' on the left. In the center, 'HE' is displayed in large characters, with '1' below it. At the bottom right, there is a battery level indicator and a small icon of a padlock.</p>	<p>Upper Temperature Limit Alarm Enabled</p>	<p>0 - 1 0: Disabled 1: Enabled</p>	<p>1</p>

# SUCH

	<p>Enable Low Temperature Alarm</p>	<p>0 - 1 0: Disabled 1: Enabled</p>	<p>1</p>
	<p>Enable High Humidity Alarm</p>	<p>0 - 1 0: Disabled 1: Enabled</p>	<p>1</p>
	<p>Enable Low Humidity Alarm</p>	<p>0 - 1 0: Disabled 1: Enabled</p>	<p>1</p>
	<p>Set Storage Interval</p>	<p>0 to 1999 minutes</p>	<p>30 minutes</p>
	<p>Set Storage Mode</p>	<p>1 - 3 1: Represents Off 2: Represents On 3: Represents Auto</p>	<p>3 (Stored only when communication is disconnected)</p>

# SUCH

	<p>Is active upload enabled for stored data?</p>	<p>0~1 0: represents disabled 1: represents enabled</p>	<p>0</p>
	<p>Clear stored data</p>	<p>0~1 Set to 1 to clear stored data</p>	<p>0</p>